



RIZADO CURLY	2	3	200°C-230°C	200°C-230°C
ONDULADO WAVY	2	2	170°C-200°C	180°C-200°C
LISO STRAIGHT	1	1	<170°C	>180°C
Quick Hair Guide de cabello	VELOC. / SPEED	TEMP.	TEMP.	TEMP.
Guía rápida	HCSTHD1900	HCSTFI2900	HCSTFI3100	

Printed in China

1 year limited warranty – please see insert for details.

© 2013 Sunbeam Products, Inc. All rights reserved. Distributed by Sunbeam Latin America, LLC, 5200 Blue Lagoon Drive, Suite 470, Miami, FL 33126.

Impreso en China

Garantía limitada de 1 año – por favor consulte los detalles en el inserto.

© 2013 Sunbeam Products, Inc. Todos los derechos reservados. Distribuido por Sunbeam Latin America, LLC, 5200 Blue Lagoon Drive, Suite 470, Miami, FL 33126.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

Read all instructions carefully.

Keep away from water.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- Do not install or store appliance where it can fall or be pulled into a bathtub or sink.
- Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- Do not use while bathing.
- Do not place in or drop into water or other liquid.
- If appliance falls into water, unplug it immediately. Do not reach into water.

WARNING: To reduce risk of burns, electrocution, fire or injury to persons:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or if it has been dropped into water. Take it to the nearest Authorized Oster™ Service Center for repairs and/or adjustments.
- Keep the cord away from heated surfaces.

HOW TO USE

Your best looks begin with a good haircut that is well maintained. You should always treat your hair with the best quality shampoos, conditioners and styling products.

This lightweight AC motor hair dryer is a powerful styling tool and must always be used with care. To avoid damage to your hair do not use hair dryer frequently. Always select a temperature setting that is suitable for your hair type.

TAKE CARE NOT TO COVER THE AIR INLET MESH GRILL WITH YOUR HAND WHEN STYLING. TAKE CARE WHEN HANDLING HOT SURFACES.

- Ensure your hands are dry and are not dripping wet.
- Plug the unit into a suitable wall electric outlet and switch on. Select the desired heat/speed setting.
- Dry and style your hair as desired.
- Set your style by pressing the Cool Shot Button . Press and hold the button to operate the Cool Shot. The Cool Shot Button will deactivate once it is released.
- Switch off by setting the on/off and speed switch to the off position to “O” and unplug your dryer from the mains supply socket. Allow your dryer to cool fully before storing.

BLOW DRYING

Attach the concentrator nozzle and hold the dryer approximately 20 cm (8 inches) away from the hair while drying. To reduce frizz, dry the hair with the dryer pointing down the hair shaft in order to smooth down the hair follicles.

- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- The unit may be hot during use. Allow it to cool before handling. To avoid burn hazard, do not let bare-skin touch heated surfaces.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Do not wrap cord around appliance. Continuous stress on the cord can damage cord insulation and result in a shock, fire or burn hazard.
- Do not operate this appliance with a voltage converter or extension cord.
- An appliance should never be left unattended when plugged in.
- Allow the appliance to cool down before storing.
- Do not place the appliance on soft material e.g. carpet, bedding, towels, rugs, etc.
- Always ensure the voltage to be used corresponds to the voltage stated on the unit.
- Use this appliance only for its intended use as described in this manual.
- Do not plug or unplug this appliance when your hands are wet.
- This appliance is hot when in use. Avoid allowing any body part to come in direct contact with the heated surfaces.
- This appliance is for household use only. It is not intended for commercial or salon use.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit.

English-2

STYLING GUIDE

Hair Drying Basics Steps:

- Step 1: Wash hair with your favorite shampoo and conditioner.
 Step 2: After washing the hair, towel dry hair.
 Step 3: Comb or brush your hair so that it is detangled and smooth.

Step 4: In order to protect hair from heat exposure, it is recommended to prepare hair before drying with a hair protector serum or spray. Spray protector or rub a few drops of your favorite hair protector to your hair.

Step 5: Distribute protector evenly by combing or brushing hair and part hair in sections and secure with clips.

Step 6: Attach the concentrator to your dryer; select the heat setting and the speed of the air. It is recommended to start at a low temperature setting and change to a higher temperature setting if you desire.

Step 7: Start with the back section of the head. Begin by drying small, manageable sections of your hair with a large round brush. Dry one section of hair at a time. Dry from the roots to the ends, moving the brush and the dryer together down the hair shaft.

Step 8: Move the dryer steadily across each section of the hair and always keep the airflow angled down toward the ends. This will make the cuticles lie flat and make your hair look smoother and shinier. Work your way around your head to the front of the head.

NOTE: To prevent burning the scalp, always direct airflow at hair not scalp.

Step 9: Once you have finished drying your hair, use the cool shot feature to set the hair. This will close the hair shaft and lock your style into place.

Step 10: The end result should be smooth and full of volume hair.

English-6

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY


BEFORE FIRST USE

Do not use this product until you have read these operating instructions carefully.



WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM. IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.

Know your Hair Dryer

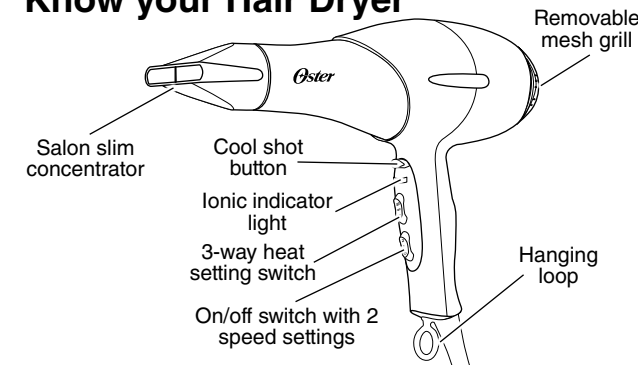

The illustrations used in these instructions may differ slightly from the actual unit supplied.

English-3

MAINTENANCE

This dryer requires minimal maintenance. To ensure the best performance, keep the hair dryer openings clear of dirt and dust. If cleaning becomes necessary, follow the following steps:

- Switch off the hair dryer and unplug it.
- Allow the hair dryer to cool down completely.
- Wipe the hair dryer gently with a damp cloth.
- Do not scrub the surface of the hair dryer.

NOTE: Never immerse the hair dryer in water or any other liquid, nor rinse it under the tap.

Air Filter should be cleaned regularly. Follow the following steps to clean air filter:

- Switch off the hair dryer and unplug it.
- Allow the hair dryer to cool down completely.
- Remove air filter cover.
- Use a soft bristle brush or damp cloth to remove any dust particle that has accumulated on the vent and grill area.

STORAGE

- Switch off the hair dryer and unplug it.
- Let the hair dryer cool down completely on a heat-resistant surface.
- Store the hair dryer in a safe and dry place. It may also be stored by hanging it from its hanging loop.

English-7

PRODUCT FEATURES

Professional AC Motor, powerful and long lasting.

Multiple heat and speed setting controls for more versatility and style.

Ionic technology creates negative ions that close the cuticle of the hair to smooth the hair and decreases drying time.

Tourmaline technology helps to make hair softer and easier to style.

Cool shot button to set hair.

Tangle free cord

1 hair slim concentrator to set the style of fine hair types.

English-4

WARRANTY

For service and warranty refer to the warranty card that came with your appliance.

English-8

Secadora de cabello con motor AC

AC MOTOR HAIR DRYER



Modelo/Model HCSTHD1900

English-5

